





















Original	Replacement
Power	Power
TV	Shift + 1
DVD	Shift + 2
Scart	Shift + 3
VGA	Shift + 4
P.M.	Picture / Format
S.M.	Sound / Title
Set Fav	Shift + Fav / Marker / PC
Display	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
0	0
Fav	Fav / Marker / PC
Recall / +10	Back / Return
Stereo / Audio	Audio / Lang I/II
Vol+	Vol+
CH+	CH+ / Page+
Scan	Smart / List
Mute	Mute / Dimmer
Vol-	Vol-
CH-	CH- / Page-
Subtitle	Subtitle / EQ
Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK





Original	Replacement
	 Right
	 AV / Input / RDS
	 Down
	 Sleep / Timer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Eject / Surround
	 Red / Netflix / Search
	 << / Tune-
	 Green / APP / Repeat
	 >> / Tune+
	 Yellow / YouTube / Repeat
	 I<< / Preset-
	 Blue / Prime Video / Random
	 >>I / Preset+
	 Text / Goto

Original	Replacement
	 D.Menu / Top
	 Info / Angle
	 Zoom / Size
	 Shift + Stop /
	 Shift + Green / APP /
	 Setup / OPT /
	 Shift + Play /
	 Shift + Text /
	 TV/Radio /

