







 


























 

 

 

 















 

 









 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Eject/Tv Audio		Eject / Surround
	4		4
	5		5
	6		6
	Recall/Goto	 + 	Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Tv Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVD Menu		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Sound		Sound / Title
	CH-		CH- / Page-
	Vol-		Vol-
	Pic		Picture / Format
	CH+		CH+ / Page+
	Sleep		Sleep / Timer
	Aspect	 + 	Shift + Picture / Format
	DVD Setup		Setup / OPT /
	Back/Tv/Radio	 + 	Shift + Back / Return
	Text		Text / Goto





	Original	Replacement		Original	Replacement
		EPG		Guide / EPG / -/--	
		Play		Play / Slow	
		Pause		Pause / Step / Freeze	
		Stop		Stop / Hold	
		FAV		Fav / Marker / PC	
		Info		Info / Angle	
		Red/DVD/USB		Red / Netflix / Search	
		Green/Title		Green / APP / Repeat	
		Yellow/PBC		Yellow / YouTube / Repeat	
		Blue/Angle		Blue / Prime Video / Random	
		<<		<< / Tune-	
		>>		>> / Tune+	
		l<<		l<< / Preset-	
		>>l		>>l / Preset+	
		Return		Back / Return	
		Display		Display / Media	
		DVD Audio		Audio / Lang I/II	
		Subtitle		Subtitle / EQ	
		Reveal		Shift + Exit / Cancel / Clear	
		Hold		Shift + Stop /	
		List		Smart / List	
		Index		TV/Radio /	
		Subpage		Shift + Smart / List	
		Size		Zoom / Size	
		Mix		Shift + Display / Media	
		Freeze		Shift + Pause / Step /	

