



Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep / Timer
	Mute		Mute / Dimmer		Input		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu / Home
	7		7		Exit		Exit / Cancel / Clear
	8		8		FAV		Fav / Marker / PC
	9		9		Vol +		Vol+
	Info		Info / Angle		ADD / DEL		Shift + Back / Return
	0		0		PR +		CH+ / Page+
	Recall		Back / Return		Vol -		Vol-
	PMode		Picture / Format		Cancel		Shift + Exit / Cancel / Clear
	I / II		Audio / Lang I/II		PR -		CH- / Page-
	EPG		Guide / EPG / -/--		Red		Red / Netflix / Search





Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Play / Pause	Play / Slow
Play / Pause	+  Shift + Play /
Stop	Stop / Hold
Setup	Setup / OPT /
Eject	Eject / Surround
I<< / Text	+  Shift + I<< / Preset-
I<< / Text	I<< / Preset-
<<	<< / Tune-
Size	Zoom / Size
S. Title M.	Sound / Title
>>I / Hold	>>I / Preset+
>>I / Hold	+  Shift + >>I / Preset+
>> / Reveal	>> / Tune+
Subpage / Rec	+  Shift + Rec / Rec Mode

Original	Replacement
Subpage / Rec	Rec / Rec Mode
Index / List	Smart / List

