



 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *(Left)	 Shift + Left
 0	 0
 *(Right)	 Shift + Right
 [ ]/Picture	 Picture / Format
 /Sound	 Sound / Title
 I-II	 Audio / Lang I/II

Original	Replacement
 Menu	 Menu / Home
 Up/PR+	 Up
 PR+	 CH+ / Page+
 List	 Smart / List
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 Down/PR-	 Down
 PR-	 CH- / Page-
 P<P	 Back / Return
 Tv/AV	 AV / Input / RDS
 Tv/PC	 TV/Radio /
 [<>]/ARC	 Shift + Picture / Format
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		* (Down) Shift + Down
	Yellow Yellow / YouTube / Repeat		PIP PR- Shift + CH- /
	Blue Blue / Prime Video / Random		
	[≡]/Text Text / Goto		
	[.≡]/Mix Shift + Text /		
	[≡♦]/Size Zoom / Size		
	[≡i]/Index Info / Angle		
	[≡x]/Update Rec / Rec Mode		
	[≡o]/Time Pause / Step / Freeze		
	[≡?]/Reveal Play / Slow		
	[≡+]/Hold Stop / Hold		
	[■]/PIP Display / Media		
	[ : ■ ] / Input Shift + AV / Input / RDS		
	[/■]/Swap Shift + Back / Return		
	PIP PR+ Shift + CH+ /		
	[-■]/Position Shift + Display / Media		
	[.≡]/Mode Shift + Smart / List		

Original	Replacement	Original	Replacement
	Green Green / APP / Repeat		* (Down) Shift + Down
	Yellow Yellow / YouTube / Repeat		PIP PR- Shift + CH- /
	Blue Blue / Prime Video / Random		
	[≡]/Text Text / Goto		
	[.≡]/Mix Shift + Text /		
	[≡♦]/Size Zoom / Size		
	[≡i]/Index Info / Angle		
	[≡x]/Update Rec / Rec Mode		
	[≡o]/Time Pause / Step / Freeze		
	[≡?]/Reveal Play / Slow		
	[≡+]/Hold Stop / Hold		
	[■]/PIP Display / Media		
	[ : ■ ] / Input Shift + AV / Input / RDS		
	[/■]/Swap Shift + Back / Return		
	PIP PR+ Shift + CH+ /		
	[-■]/Position Shift + Display / Media		
	[.≡]/Mode Shift + Smart / List		

