



 



 

 


 




 






 
 
 

 
 


 



 

 

 

 

 

 


 




Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Mute		Mute		9		9
	Tv/DVB-T		Smart		0		0
	[ ]/Line		Media		-/--		Shift + Guide
	[ +]/Display		Info		PRE		Pre Ch
	[≡]/TXT		Text		Vol+		Vol +
	PIP On/Off		Shift + 3D		Vol-		Vol -
	PIP Swap		Shift + Subt		Prog+		Ch +
	PIP Source		Shift + AV		Prog-		Ch -
	PIP Sound		Shift + TV/R		MS		Back
	1		1		[▼]/Still		AV
	2		2		Timer/Sleep		Shift + Power
	3		3		[II]/Tv Menu		Menu
	4		4		-I/I-/P.STD		Shift + Format
	5		5		-I/I-/S.STD		Shift + Dual
	6		6		Up/P+		Up
	7		7		Down/P-		Down





Original	Replacement	Original	Replacement
 Right/Vol+	 Right	 Blue/Menu	 Blue
 Left/Vol-	 Left	 Timer/repeat	 Shift + Text
 Enter	 Ok	 [≡i]/A-B	 Shift + Info
 [<>]/P.Size	 Format	 [ /≡]/Audio	 Dual
 -IXI/Exit	 Exit	 [≡♦]/Subtitle	 Subt
 Open/Close	 Eject	 [≡?]/Goto	 Options
 Rec	 Rec	 [≡+]/Program/Me	 TV/R
 Stop	 Stop	 [<≡]/List/Angle	 Shift + Ch -
 Play	 Play	 [≡>]/Bookmark/O	 Shift + Ch +
 Pause	 Pause	 [≡o]/Zoom/EPG	 Guide
 <</< Slow	 <<	 [≡X]/Cancel/i	 3D
 Slow >/>>	 >>		
 I<</<I Step	 I<<		
 Step I>/>>I	 >>I		
 Red/Setup	 Red		
 Green/Input	 Green		
 Yellow/Title	 Yellow		

