



 








 


 
 

 
 



 


 
 



 



 


 





 


 
 
 



 

 
 
 












 




Original	Replacement	Original	Replacement
 Power	 Power	 Blue / Title	 Blue
 HDMI Control	 D. Menu	 1	 1
 Record	 Rec	 2	 2
 Play	 Play	 3	 3
 Pause	 Pause	 4	 4
 Stop	 Stop	 5	 5
 I<<<	 I<<<	 6	 6
 <<<	 <<<	 7	 7
 >>>	 >>>	 8	 8
 >>>I	 >>>I	 9	 9
 Screen	 Format	 0	 0
 Lang	 Dual	 Text	 Text
 Subtitle	 Subt	 Swap	 Pre Ch
 Internet	 Media	 Up	 Up
 Red/Zoom/↑	 Red	 Down	 Down
 Green/Repeat/↓	 Green	 Right	 Right
 Yellow / Root	 Yellow	 Left	 Left





Original		Replacement		Original	Replacement
	Ok		Ok		
	P/Ch+		Ch +		
	P/Ch-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	Menu		Menu		
	Source		AV		
	Return		Back		
	Epg		Guide		
	Info		Info		
	Sleep		Sleep		
	3D		3D		
	Search Mode		TV/R		
	Music/Movie/Phot		Smart		
	Display		Shift + Info		
	Presets		Options		

