




 





 

 



 

 























 


 
 


 
 


 
 

 

 

 




 





Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Mute		Mute		5		5
	TV / AV		AV		6		6
	Menu		Menu		7		7
	Sleep		Sleep		8		8
	Up / PR+		Up		9		9
	Up / PR+		Ch +		0		0
	Down / PR-		Down		APC		I<<
	Down / PR-		Ch -		ASC		<<
	Right / Vol+		Right		ARC		>>
	Right / Vol+		Vol +		PIP		Smart
	Left / Vol-		Left		Review		Info
	Left / Vol-		Vol -		MTS		Dual
	OK		Ok		Multi PIP		Format
	1		1		Multimedia		Media
	2		2		Red / PIP CH+		Red
	3		3		Green / PIP CH-		Green





Original	Replacement	Original	Replacement
SWAP  Yellow / PIP SWAP	 Yellow		
INPUT  Blue / PIP Input	 Blue		
TEXT  Text	 Text		
MODE  Mode	 Options		
SIZE / SIZE  Size / PIP Size	 Eject		
MIX  Mix	 TV/R		
SUB PAGE  Sub Page	 Subt		
INDEX  Index	 Shift + Info		
REVEAL  Reveal	 D. Menu		
HOLD STILL  Hold / PIP Still	 Stop		
UPDATE POSITION  Update / PIP Position	 Guide		

