 


 










 


 




 


 







 



 

 

 

 






 
 
 
 







 








Original	Replacement	Original	Replacement
 Power	 Power	 Display	 Info
 Auto / Eject	 Eject	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Menu	 D. Menu
 8	 8	 LCD Menu	 Menu
 9	 9	 DVD Setup	 Options
 0	 0	 Input	 AV
 -/--	 GUIDE	 P.Mode	 Format
 Back	 Back	 A.Mode	 Dual
 Vol+	 Vol +	 Mute	 Mute
 Vol-	 Vol -	 Play / Pause	 Play
 Title	 Smart	 Stop	 Stop





Original		Replacement		Original	Replacement
	Slow / Step		Pause		
	Audio / Nicam	 + 	Shift + Dual		
	Text / <<<		Text		
	Text / <<<		<<<		
	>>> / Mix		>>>		
	Hold / Goto	 + 	Shift + Stop		
	Picture / Subtitle	 + 	Shift + Format		
	I<<< / Index		I<<<		
	>>>I / Size		>>>I		
	Reveal / Zoom	 + 	Shift + Eject		
	Subpage /	 + 	Shift + Subt		
	Picture / Subtitle		Subt		
	Red / Program		Red		
	Green / Intro		Green		
	Yellow / Repeat		Yellow		
	Blue / A-B		Blue		

