
 





Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Original	Replacement
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right






 
 






 

 
 



 
 




Original		Replacement		Original		Replacement	
	Left		Left		FAV-		Shift + Ch -
	Enter		Ok				
	CH+		Ch +				
	CH-		Ch -				
	FAV		Pre Ch				
	EPG		Guide				
	Info		Info				
	List		List				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Size		Format				
	Reveal		3D				
	Subtitle		Subt				
	Subpage		AV				
	FAV+		Shift + Ch +				





Original	Replacement	Original	Replacement
Power		Power	Power
Mute		Mute	Mute
[ I ]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Replacement	Original	Replacement
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Replacement	Original	Replacement
Audio	SOUND DUAL		
I<</[≡+]	⏮		
>>I/[≡..]	⏭		
[≡i]	HOME SMART		
Play	PLAY MODE		
Pause	⏸		
Stop	⏹		
REP/Rec	REC MODE		
<</[≡o]	⏮		
>>/[≡?]	⏭		
FAV	FAV PRE-CH		

