
 
 
 


 


 






 
 


 



 

 


 






Original	Replacement	Original	Replacement
On/Off	 Power	Display	 Shift + Info
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Info	 Info	Menu audio	 Dual
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
OK Enter	 Ok	7	 7



Original	Replacement	Original	Replacement
8		Nicam/Mono	+ Shift + Green
9		Level L	+ Shift + Yellow
Guide -/-- 1.		Audio-	+ Shift + Vol -
0/10		Audio+	+ Shift + Vol +
2.Fav P/C 2.		Level R/Woofer	+ Shift + Blue
Red			
Green			
Tone-			
Yellow			
Blue			
Off/Tim	+		
On/Tim			
Color+ P.Std			
Contrast+	+		
Color- S.Std	+		
Contrast-	+		
Surround	+		

