



 


 



 





Original	Replacement
 Power	 Power
 Mute	 Mute
 TV / Radio	 TV/R
 FAV	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu

Original	Replacement
 EPG	 Guide
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Info	 Info
 Media	 Media
 Back	 Back
 Rec	 Rec
 Stop	 Stop
 Exit	 Exit
 <<	 I<<
 <<	 <<
 Play/Pause	 Pause



