



| Original | Replacement | Original | Replacement |
|----------|---------------|----------|-----------------------------|
| Power | Power | Up | Up |
| 1 | 1 | Left | Left |
| 2 | 2 | OK | OK |
| 3 | 3 | Right | Right |
| 4 | 4 | Down | Down |
| 5 | 5 | Exit | Exit / Cancel / Clear |
| 6 | 6 | EPG | Guide / EPG / -/-- |
| 7 | 7 | TV | Display / Media |
| 8 | 8 | TV | AV / Input / RDS |
| 9 | 9 | Radio | TV/Radio / |
| < Prev | I<< / Preset- | Red | Red / Netflix / Search |
| 0 | 0 | Green | Green / APP / Repeat |
| Next> | >>I / Preset+ | Yellow | Yellow / YouTube / Repeat |
| Help | D.Menu / Top | Blue | Blue / Prime Video / Random |
| Timer | Sleep / Timer | Vol+ | Vol+ |
| Menu | Menu / Home | Mute | Mute / Dimmer |
| Info | Info / Angle | CH+ | CH+ / Page+ |





| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-----------------------|
| | Vol- | | Vol- |
| | PVR | | Smart / List |
| | CH- | | CH- / Page- |
| | Audio | | Audio / Lang I/II |
| | Text | | Text / Goto |
| | Subtitle | | Subtitle / EQ |
| | << | | << / Tune- |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |
| | Pause | | Pause / Step / Freeze |
| | Rec | | Rec / Rec Mode |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

