



























 


 

 




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 Recall	 Fav / Marker / PC
 Google Play	 Display / Media
 YouTube	 Shift + Yellow / YouTube /
 Netflix	 Shift + Red / Netflix / Search

Original	Replacement
 prime video	 Shift + Blue / Prime
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Smart/Colours	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 [i+]	 Info / Angle
 *	 Setup / OPT /





Original	Replacement	Original	Replacement
Mute	Mute / Dimmer		
<<<	<<< / Tune-		
Pause	Pause / Step / Freeze		
>>>	>>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		
Text	Text / Goto		
Aspect	Picture / Format		
Subtitles	Subtitle / EQ		
Lang	Audio / Lang I/II		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

Original	Replacement

