

 

 

 
 

 

 


 


 

 

 
 
 
 


 

 


 





Original	Replacement
 Power	 Power
 Source Search	 Source
 Help	 Shift + Info/Help / Help
 1	 Vol + / Page +
 2	 Volt / Focus
 3	 + / Play
 4	 Vol - / Page -
 5	 - / Stop
 6	 Help / Info
 7	 Eco / Aspect
 8	 3D / Invert
 9	 Blank / Mute
 0	 Comp / Video
 Menu	 Menu
 ESC	 Shift + Power
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Volume	 Mode
 Left	 Left
 Enter	 Enter
 Auto	 Auto
 Freeze	 Freeze / Timer
 E-Zoom+	 Shift + Up
 E-Zoom-	 Shift + Down
 AV Mute	 Shift + Blank / Mute
 Page+	 Shift + Vol + / Page +
 Page-	 Shift + Vol - / Page -

