



| Original | Replacement |
|---|-------------------|
|  | Mute / Dimmer |
|  | Picture / Format |
|  | Power |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | AV / Input / RDS |
|  | 0 |
|  | Back / Return |
|  | D.Menu / Top |
|  | Fav / Marker / PC |

| Original | Replacement |
|---|-----------------------------|
|  | TV/Radio / |
|  | Menu / Home |
|  | Text / Goto |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Down |
|  | Vol+ |
|  | CH+ / Page+ |
|  | Vol- |
|  | CH- / Page- |
|  | Red / Netflix / Search |
|  | Green / APP / Repeat |
|  | Yellow / YouTube / Repeat |
|  | Blue / Prime Video / Random |
|  | Info / Angle |



