



Original	Replacement	Original	Replacement
	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	Red/[o]		Red
	Green/Timer/List		Green
	Yellow		Yellow
	Blue/[]		Blue
	Info		Info
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/-/--		0
	AV		AV
	SP/LP		Media
	Play		Play
	>>		>>





Original	Replacement	Original	Replacement
Power	Power	Blue/[]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	Play	Play
PR+	Ch +	Stop	Stop
PR-	Ch -	Rec	Rec
Exit	Exit	Pause	Pause
Menu	Menu	>>	>>
Back	Back	<<	<<
Up	Up	1	1
Down	Down	2	2
Right/Zoom+	Right	3	3
Left/Zoom-	Left	4	4
OK	Ok	5	5
Red/[o]	Red	6	6
Green/Timer/List	Green	7	7
Yellow	Yellow	8	8





Original	Replacement	Original	Replacement
	Power		Blue/[]
	Vol +		Info
	Vol -		Text
	Mute		1
	Ch +		2
	Ch -		3
	Menu		4
	Exit		5
	Back		6
	Up		7
	Down		8
	Right		9
	Left		0
	Ok		AV
	Red		Media
	Green		Play
	Yellow		Stop





Original	Replacement	Original	Replacement
 >>	 >>		
 <<	 <<		
 Rec	 REC MODE Rec		
 Pause	 Pause		
 Mark	 ECO 3D 3D		
 0000	 -/-- GUIDE Guide		

