 










 

 

 

 

 


 


 



 











 
 
 

 
 



 



 




 




 







Original	Replacement	Original	Replacement
 Power	 Power	 Prog+	 Ch +
 1	 1	 Prog-	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 List	 List
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 EPG	 Guide	 Red / Timer	 Red
 Info	 Info	 Red / Timer	 AV
 Vol+	 Vol +	 Green / FAV	 Green
 Vol-	 Vol -	 Green / FAV	 Pre Ch
 Mute	 Mute	 Yellow / Repeat	 Yellow
 TV / Radio	 TV/R	 Blue / Goto	 Blue





	Original	Replacement	Original	Replacement
	Audio	 Dual		
	SUB	 Subt		
	Yellow / Repeat	 +  Shift + Text		
	Text	 Text		
	File	 Media		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	Rec	 Rec		
	I<< PREV	 I<<		
	>>I NEXT	 >>I		
	<< REW	 <<		
	>> FWD	 >>		

