 

 



 

 

 

 

 



 

 
 
 

 

 

 
 




Original		Replacement		Original		Replacement	
	Power		Power		Ch+		Ch +
	Display	 + 	Shift + Info		Ch-		Ch -
	Nicam/A2		List		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	PMode	 + 	Shift + Format		1		1
	SMode	 + 	Shift + Dual		2		2
	Sleep		Sleep		3		3
	Aspect		3D		4		4
	LCD-Menu		Menu		5		5
	DVB-Menu		D. Menu		6		6
	Source		AV		7		7
	Exit		Exit		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		Text		Text
	Left		Left		Hold		Media
	Enter		Ok		Red		Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		
 Index	 Smart		
 Size	 Format		
 Reveal	 Options		
 Subpage	 Eject		
 Tv/Radio	 TV/R		
 Lang	 Dual		
 Page-	 I<<		
 Page+	 >>I		
 Subtitle	 Subt		
 Epg	 Guide		
 Fav	 Pre Ch		
 Info	 Info		

