



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Eject		Eject / Surround		Home		Shift + Menu /
	1		1		Back		Back / Return
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Down		Down
	7		7		Stop		Stop / Hold
	8		8		Play/Pause		Play / Slow
	9		9		Info		Info / Angle
	X/ Shuffle		AV / Input / RDS		<<		<< / Tune-
	0		0		>>		>> / Tune+
	Repeat		Shift + Green / APP /		<<		<< / Preset-
	Vol-		Vol-		>>		>> / Preset+
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat





Original	Replacement	Original	Replacement
 EPG	 Guide / EPG / -/--		
 TXT	 Text / Goto		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Setup	 Setup / OPT /		
 Tv Sys.	 TV/Radio /		
 Audio	 Audio / Lang I/II		
 Subt.	 Subtitle / EQ		
 → /Goto	 Shift + Right		
 >/Slow	 Shift + Play /		
 Angle	 Shift + Info / Angle		
 Zoom	 Zoom / Size		
 Rec	 Rec / Rec Mode		
 Edit	 D.Menu / Top		
 Copy	 Picture / Format		
 Timeshift	 Sleep / Timer		

Original	Replacement	Original	Replacement

