


 
 

 




 



 
 

 
 
 

 

 
 


 
 
 


 
 

 
 

 
 
 


 





 
 
 



 

 

 
 
 

 

 
 

 

 
 



Original	Replacement
 Power	 Power
 Tv/Radio	 TV/R
 Subtitle	 Subt
 Q Menu	 Menu
 Guide	 Guide
 []/Ratio	 Dual
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 List	 List
 Q.View	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 APP/*	 Shift + Media
 Fav	 Pre Ch
 PR+	 Ch +
 PR-	 Ch -
 Text	 Text
 Info	 Info
 T.Opt	 Options
 Smart	 Smart
 My Apps	 Media
 Back	 Back
 Exit	 Exit
 Up	 Up





Original	Replacement	Original	Replacement
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Settings	 Shift + Options		
 Rec	 Rec		
 Stop/Line Tv	 Stop		
 <<	 <<		
 Play	 Play		
 Pause	 Pause		
 >>	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

