







 



 
 


 
 


 



 







 











 









 

 















Original	Replacement	Original	Replacement
 AV/Input	 AV / Input / RDS	 PR/CH-	 CH- / Page-
 Power	 Power	 Down	 Down
 Open/Close	 Eject / Surround	 Return	 Back / Return
 DVD	 Shift + 2	 Rec	 Rec / Rec Mode
 HDD	 Shift + 7	 Marker	 Fav / Marker / PC
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 Title	 Sound / Title	 Play	 Play / Slow
 Display	 Display / Media	 Pause/Step	 Pause / Step / Freeze
 Home	 D.Menu / Top	 I<<	 I<< / Preset-
 Home	 Smart / List	 <<	 << / Tune-
 Menu/List	 Menu / Home	 >>	 >> / Tune+
 Menu/List	 Shift + Smart / List	 >>I	 >>I / Preset+
 PR/CH+	 CH+ / Page+	 Repeat	 Green / APP / Repeat
 Up	 Up	 Timeshift	 Sleep / Timer
 Left	 Left	 Clear	 Exit / Cancel / Clear
 Enter	 OK	 Power Tv	 Shift + Power
 Right	 Right	 1	 1





Original		Replacement		Original		Replacement	
	2		2				
	3		3				
	PR/CH+ Tv		Shift + CH+ /				
	4		4				
	5		5				
	6		6				
	PR/CH- Tv		Shift + CH- /				
	7		7				
	8		8				
	9		9				
	Vol+ Tv		Vol+				
	TV/DVD		TV/Radio /				
	0		0				
	AV Input Tv		Shift + AV / Input / RDS				
	Vol- Tv		Vol-				

