



Original	Replacement
POWER	Power
INFO	Info / Angle
HDM CONTROL	Smart / List
SLEEP	Sleep / Timer
SCREEN	Picture / Format
SOURCE	AV / Input / RDS
PRESETS	Set up / OPT /
1	1
2	2
3	3
ZOOM RED / ▲	Zoom / Size
ZOOM RED / ▲	Shift + CH+ /
ZOOM RED / ▲	Red / Netflix / Search
4	4
5	5
6	6
REPEAT / GREEN ▼	Shift + CH- / Page-

Original	Replacement
REPEAT / GREEN ▼	Green / APP / Repeat
7	7
8	8
9	9
ROOT / YELLOW	Yellow / YouTube / Repeat
RETURN	Back / Return
0	0
MENU	Menu / Home
TITLE / BLUE	Sound / Title
TITLE / BLUE	Blue / Prime Video / Random
UP	Up
LEFT	Left
OK / SELECT	OK
RIGHT	Right
DOWN	Down
P+	CH+ / Page+
P-	CH- / Page-





Original	Replacement
	VOL Vol -
	VOL Vol +
	PC FAV MARKER Fav / Marker / PC
	LANG I/II Audi o / Lang I / II
	EQ SUBTITLE Subt it le / EQ
	DIMMER MUTE Mute / Di mmer
	SHIFT + RETURN Shi ft + Back / Ret urn
	GUIDE EPG Gui de / EPG / - / -
	TOP MENU D.MENU D. Menu / Top
	GOTO TEXT Text / Got o
	CLEAR EXIT Exi t / Cancel / Cl ear
	MEDIA DISPLAY Di spl ay / Medi a
	SHIFT + ANGLE INFO Shi ft + Info / Ang le
	SHIFT + NETFLIX SEARCH Shi ft + Red / Netfl ix /
	REC MODE Rec / Rec Mde
	HOLD St op / Hol d
	SLOW Pl ay / Sl ow

Original	Replacement
	STEP-FREEZE Pause / Step / Freeze
	TUNE- << / Tune-
	TUNE+ >> / Tune+
	PRESET- I << / Preset-
	PRESET+ >> I / Preset +

