



Original	Replacement		
	Power		Power
	1		1
	2		2
	3		3
	PIP		Info / Angle
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	>		>> / Preset+
	7		7
	8		8
	9		9
	?		Smart / List
	<		<< / Preset-
	0		0
	Mute		Mute / Dimmer

Original	Replacement		
	i/OSD		Display / Media
	Z/Disc Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	Down		Down
	P-		CH- / Page-
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Image/I>		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat





 




















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	[<>]		Zoom / Size
	>		>> / Preset+
	7		7
	8		8
	9		9
	?		Smart / List
	<		<< / Preset-
	0		0
	Mute		Mute / Dimmer
	i/OSD		Display / Media
	Z/Disc Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	TXT		Text / Goto
	<<		<< / Tune-
	Down		Down
	P-		CH- / Page-
	TV-G		Guide / EPG / -/-
	>>		>> / Tune+
	Red/Image/I>		Red / Netflix / Search
	Red/Image/I>		Shift +
			Play / Slow





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP/Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 [<>]	 Zoom / Size
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 0	 0
 i/OSD	 Display / Media

Original	Replacement
 Z/Disc Menu	 Menu / Home
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 P-	 CH- / Page-
 Down	 Down
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Picture / Format
 Red/Image/I>	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat



