






Original	Replacement
	Power
	1
	2
	3
	Setup / OPT /
	4
	5
	6
	Picture / Format
	7
	8
	9
	Smart / List
	0
	Mute / Dimmer
	Info / Angle
	Menu / Home

Original	Replacement
	CH+ / Page+
	Up
	Left
	Vol-
	OK
	Right
	Vol+
	Text / Goto
	Down
	CH- / Page-
	Display / Media
	D.Menu / Top
	Shift + Yellow / YouTube /
	Shift + 6
	Shift + TV/Radio / Program
	Red / Netflix / Search
	Shift + Picture / Format





















 

















Original	Replacement
 Green / Timer	 Sleep / Timer
 Green / Timer	 Green / APP / Repeat
 Yellow / Pause	 Pause / Step / Freeze
 Yellow / Pause	 Yellow / YouTube / Repeat
 Blue / Sound	 Blue / Prime Video / Random
 Blue / Sound	 Sound / Title
 TV	 Shift + 1
 TV	 TV/Radio /

Original	Replacement
















Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Setup / OPT /
 4	 4
 5	 5
 6	 6
 Format	 Picture / Format
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Replacement
 Up / P+	 CH+ / Page+
 Up / P+	 Up
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 TXT	 Text / Goto
 Down / P-	 Down
 Down / P-	 CH- / Page-
 TV-G	 Display / Media
 Repeat	 Shift + Green / APP /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 Red / I<	 I<< / Preset-
 Red / I<	 Red / Netflix / Search





 

































	Original	Replacement	Original	Replacement
	Green / >	 >> / Preset+		
	Green / >	 Green / APP / Repeat		
	Yellow / <<	 Yellow / YouTube / Repeat		
	Yellow / <<	 << / Tune-		
	Blue / >>	 >> / Tune+		
	Blue / >>	 Blue / Prime Video / Random		





Original	Replacement
	 Power
	 1
	 2
	 3
	 Setup / OPT /
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Smart / List
	 0
	 Mute / Dimmer
	 Info / Angle
	 Menu / Home

Original	Replacement
	 Up
	 CH+ / Page+
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Text / Goto
	 Down
	 CH- / Page-
	 Display / Media
	 Shift + Green / APP /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 Red / Netflix / Search





Original		Replacement		Original		Replacement	
	Green / >		>> / Preset+				
	Green / >		Green / APP / Repeat				
	Yellow / <<		<< / Tune-				
	Yellow / <<		Yellow / YouTube / Repeat				
	Blue / >>		>> / Tune+				
	Blue / >>		Blue / Prime Video / Random				

