

































 













 























Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0	 0
 PIP	 Set up / OPT /
 Tuner	 Sleep / Tuner
 Format	 Picture / Format
 Disp	 Display / Media
 EPG	 Guide / EPG / - / -

Original	Replacement
 Δ↑	 Smart / List
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 P+	 Up
 P+	 CH+ / Page+
 V-	 Left
 V-	 Vol -
 OK	 OK
 V+	 Vol +
 V+	 Right
 P-	 CH- / Page-
 P-	 Down
 Input	 AV / Input / RDS
 Text	 Text / Goto
 Red / Picture	 Shift + Picture / Format
 Red / Picture	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
 Yellow	 YouTube / Repeat		
 Blue / Sound	 Sound / Title		
 Blue / Sound	 Prime Video / Random		
 << / - / 00	 << / Tune-		
 Play/ Pause / Text Reveal	 Play / Slow		
 Play/ Pause / Text Reveal	 Pause / Step / Freeze		
 >> / + / 00	 >> / Tune+		
 I <<	 I << / Preset-		
 Stop	 Stop / Hold		
 >> I	 >> I / Preset +		
 Rec / Text Cancel	 Rec / Rec Mode		

