 




 


 
 

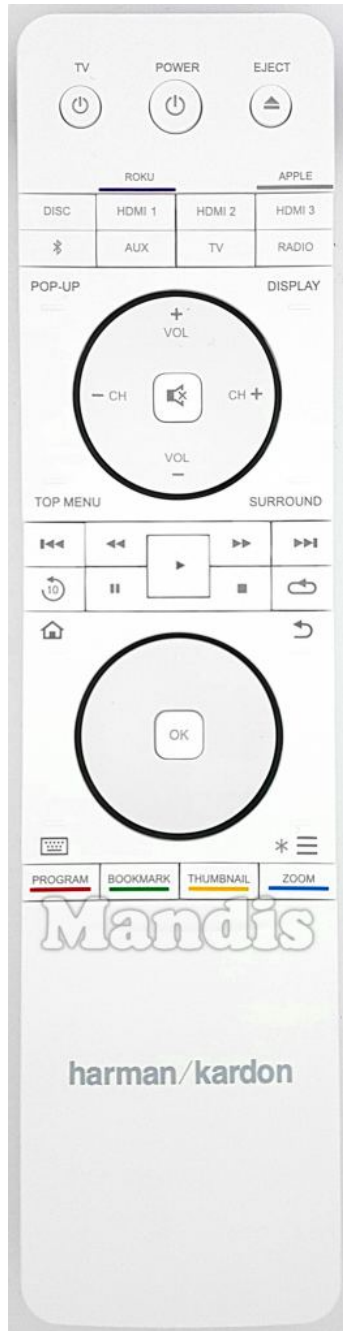 




 
 

 
 

 

 

 
 




 




 



























 

 

 



 

 


 

Original	Replacement
 Power	 Power
 Pop Up	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Top Menu	 Menu
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Back	 Back
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 [:::]	 Guide
 Red/Program	 Red
 Green/Bookmar	 Green
 Yellow/Thumbnail	 Yellow
 Blue/Zoom	 Blue

 




Original	Replacement
 Power	 Power
 Eject	 Eject
 Disc	 1
 HDMI1/Roku	 2
 HDMI2	 3
 HDMI3/Aple	 4
 Bluetooth	 5
 AUX	 6
 TV	 7
 Radio	 TV/R
 Pop Up	 D. Menu
 Display	 Info
 Top Menu	 Menu
 Surround	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

 
Original	Replacement
 CH+	 Ch +
 CH-	 Ch -
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Recall	 Pre Ch
 (10)	 Media
 [::]	 Guide
 Home	 Smart
 *≡	 Options
 Back	 Back
 Up	 Up
 Down	 Down

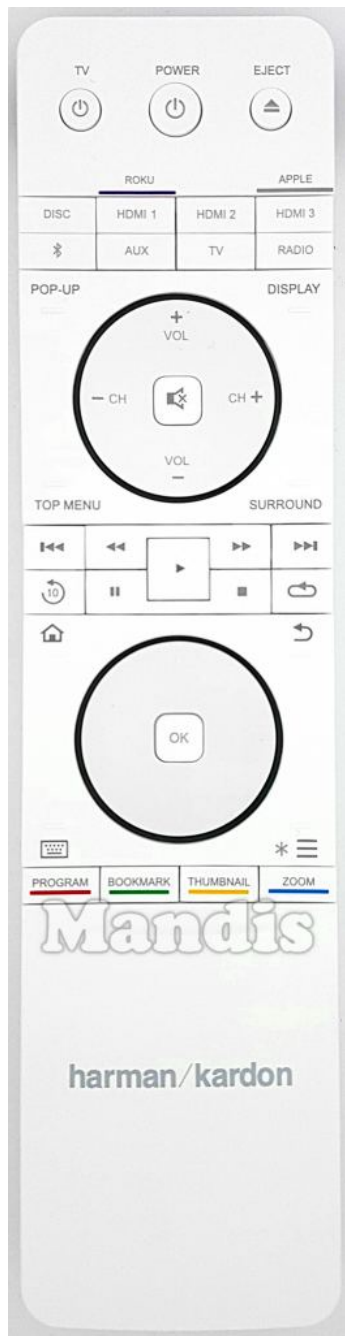


 






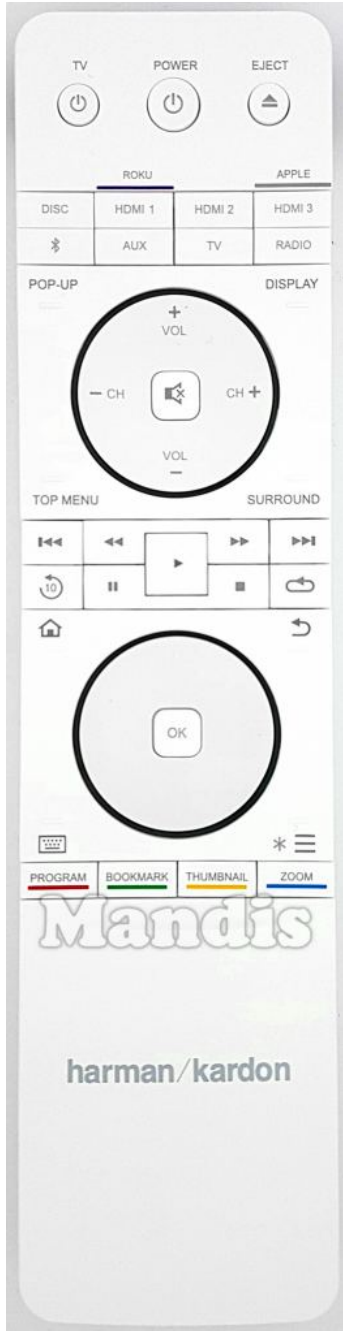




 


 

 



 









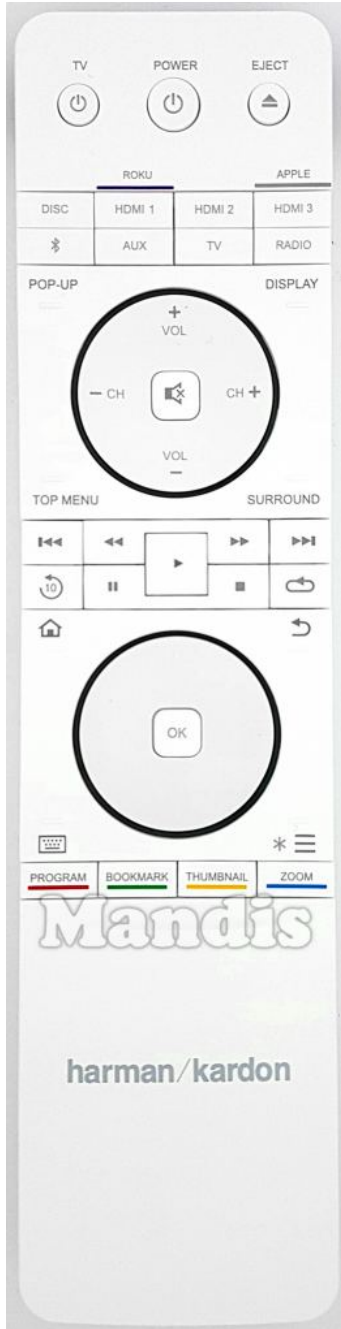 
Original		Replacement		Original		Replacement	
	Right		Right				
	Left		Left				
	OK		Ok				
	Red/program		Red				
	Green/Bookmar		Green				
	Yellow/Thumbnail		Yellow				
	Blue/Zoom		Blue				




 


	Original	Replacement	Original	Replacement
	Power	 Power		
	Pop Up	 D. Menu		
	Play	 Play		
	>>	 >>		
	<<	 <<		
	Pause	 Pause		
	Stop	 Stop		
	OK	 Ok		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		





Original	Replacement
 Power Tv	 Power
 Eject	 Eject
 Pop Up	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Recall	 Back
 Up	 Up
 OK	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 Red/Program	 Red
 Green/Bookmar	 Green
 Yellow/Thumbnail	 Yellow
 Blue/Zoom	 Blue
 CH+	 Ch +

Original	Replacement
 CH-	 Ch -

