




Original	Replacement	Original	Replacement
On	Power	Left	Left
Off	+  Shift + Power	1	1
Vol+	Vol +	2	2
Vol-	Vol -	3	3
Mute	Mute	4	4
Test	Smart	5	5
Night	Exit	6	6
[=]	Text	7	7
Sleep	Sleep	8	8
Surr.	Dual	9	9
SPKR/Menu	Menu	0	0
Delay/Normal	Info	Tun-M/[≡+]	Guide
CH./[≡?]	TV/R	Mem/[≡◇]	Pre Ch
Digital/[≡X]	Media	Tuning ▲	Ch +
Up	Up	Tuning ▼	Ch -
Down	Down	Direct/Green	Green
Right	Right	Clear/Yellow	Yellow









 
 

 







 


 












 
 
 

 

 

 

 





 




















Original	Replacement
 Preset ▲	 Shift + Ch +
 Preset ▼	 Shift + Ch -
 OSD	 Back
 RDS/D.Skip	 Options
 Set	 Ok
 Red	 Red
 Blue	 Blue
 DVD	 Shift + 2
 AVR	 Shift + 1
 CD	 Shift + 3
 Tape	 Shift + 4
 VID1/VCR	 Shift + 5
 VID2/TV	 Shift + 6
 VID3/CBL/SAT	 Shift + 7
 VID4	 Shift + 8
 AM/FM	 Shift + 9
 6/8 CH	 Shift + Guide

Original	Replacement
 > DVD	 Play
 Logic 7	 Shift + Pre Ch
 Stereo	 Shift + Blue
 DTS Neo 6	 Shift + Yellow
 DTS Surr.	 Shift + Green
 Dolby	 Shift + Red
 << DVD	 <<
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause
 I<</Skip Down	 I<<
 Skip Up/>>I	 >>I





Original		Replacement		Original		Replacement	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Night		Exit		5		5
	[≡]		Text		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	SPKR/Menu		Menu		9		9
	CH./[≡?]		TV/R		0		0
	Digital/[≡X]		Media		Tun-M/[≡+]		Guide
	Delay/Normal		Info		Mem/[≡◇]		Pre Ch
	Up		Up		Direct		Smart
	Down		Down		Clear		Shift + Exit
	Right		Right		Preset ▲		Ch +
	Left		Left		Preset ▼		Ch -
	Set		Ok		RDS/D.Skip		Options
	1		1		>>		>>
	2		2		<<		<<











 



 


 






 







 



 
 





 






 

 
 









Original	Replacement	Original	Replacement
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<





Original	Replacement	Original	Replacement
 Power On	 Power	 Preset ▲/Blue	 Ch +
 Power Off	 Shift + Power	 RDS/D.Skip	 Options
 SPKR/Menu	 Menu	 >>	 >>
 Delay/Normal	 Info	 <<	 <<
 1	 1	 Play	 Play
 2	 2	 Stop	 Stop
 3	 3	 Pause	 Pause
 4	 4	 >>	 >>
 5	 5	  <<	  <<
 6	 6	 Power (On /Off)	 Media
 7	 7	 PR+ VCR	 Shift + Ch +
 8	 8	 PR- VCR	 Ch -
 9	 9	 Vol+ VCR	 Vol +
 0	 0	 Vol- VCR	 Vol -
 Tun-M/[≡+]	 Guide	 1 VCR	 Shift + 1
 Mem/[≡◆]	 Pre Ch	 2 VCR	 Shift + 2
 Direct	 Smart	 3 VCR	 Shift + 3





Original	Replacement
4 VCR	+  Shift + 4
5 VCR	+  Shift + 5
6 VCR	+  Shift + 6
7 VCR	+  Shift + 7
8 VCR	+  Shift + 8
9 VCR	+  Shift + 9
0 VCR	+  Shift + 0
Clear VCR	Exit
Play VCR	Red
Stop VCR	Green
Rec VCR	Rec
>> VCR	Blue
<< VCR	Yellow

Original	Replacement





Original	Replacement	Original	Replacement
	<>		Play
	>>		>>
	<<		<<
	Stop		Stop
	Rec		Rec

