

















 




| Original  | Replacement   |
|---|---|
|  Power On      |  Power         |
|  Power Off     |  Shift + Power |
|  Mute          |  Mute          |
|  Stereo        |  Shift + Dual  |
|  Cable/Sat     |  Green         |
|  TV            |  Blue          |
|  CD            |  Yellow        |
|  Menu          |  Menu          |
|  Harman Volume |  Smart         |
|  Exit          |  Exit          |
|  Tone Control  |  Back          |
|  Up          |  Up          |
|  Down        |  Down        |
|  Right       |  Right       |
|  Left        |  Left        |
|  OK          |  Ok          |
|  1           |  1           |

| Original  | Replacement  |
|---|--|
|  2               |  2            |
|  3               |  3            |
|  4               |  4            |
|  5               |  5            |
|  6               |  6            |
|  7               |  7            |
|  8               |  8            |
|  9               |  9            |
|  0               |  0            |
|  Clear           |  Shift + Exit |
|  Direct          |  Guide        |
|  Vol+          |  Vol +      |
|  Vol-          |  Vol -      |
|  CH/Tuner Up   |  Ch +       |
|  CH/Tuner Down |  Ch -       |
|  Speaker 1     |  Options    |
|  Speaker 2     |  Dual       |





| Original   | Replacement   |
|--|---|
|  Sleep    |  Sleep       |
|  Dim      |  TV/R        |
|  P.Scan   |  Text        |
|  A.Preset |  AV          |
|  MEM      |  Format      |
|  RDS      |  Subt        |
|  Prev.CH  |  Pre Ch      |
|  I<       |  I<<         |
|  <<       |  <<          |
|  >>      |  >>         |
|  >I     |  >>I       |
|  Stop   |  Stop      |
|  Play   |  Play      |
|  Pause  |  Pause     |
|  Phono  |  Shift + 1 |
|  FM/AM  |  Shift + 2 |
|  USB    |  Shift + 3 |

| Original  | Replacement   |
|---|---|
|  Bluetooth |  Shift + 4 |
|  vTuner    |  Shift + 5 |
|  Network   |  Shift + 6 |
|  AUX       |  Shift + 7 |
|  Digital   |  Shift + 8 |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |









| Original      | Replacement   |
|---------------|---------------|
| Power On      | Power         |
| Power Off     | Shift + Power |
| Mute          | Mute          |
| Stereo        | Shift + Dual  |
| Cable/SAT     | Green         |
| TV            | Blue          |
| CD            | Yellow        |
| Menu          | Menu          |
| Harman Volume | Smart         |
| Exit          | Exit          |
| Tone Control  | Back          |
| Up            | Up            |
| Down          | Down          |
| Right         | Right         |
| Left          | Left          |
| OK            | Ok            |
| 1             | 1             |

| Original      | Replacement  |
|---------------|--------------|
| 2             | 2            |
| 3             | 3            |
| 4             | 4            |
| 5             | 5            |
| 6             | 6            |
| 7             | 7            |
| 8             | 8            |
| 9             | 9            |
| 0             | 0            |
| Clear         | Shift + Exit |
| Direct        | Guide        |
| Vol+ Stereo   | Vol +        |
| Vol- Stereo   | Vol -        |
| CH/Tuner Down | Ch +         |
| CH/Tuner Up   | Ch -         |
| Speaker 1     | Options      |
| Speaker 2     | Dual         |





| Original  | Replacement | Original  | Replacement |
|---|-------------|---|-------------|
|    | Sleep       |    | Sleep       |
|    | DIM         |    | TV/R        |
|    | P.Scan      |    | Text        |
|    | A.Preset    |    | AV          |
|    | MEM         |    | Format      |
|    | RDS         |    | Subt        |
|    | Prev.CH     |    | Pre Ch      |
|    | I<          |    | I<<         |
|    | <<          |    | <<          |
|   | >>          |   | >>          |
|  | >I          |  | >>I         |
|  | Stop        |  | Stop        |
|  | Play        |  | Play        |
|  | Pause       |  | Pause       |
|   |             |   |             |
|   |             |   |             |
|   |             |   |             |

