











 

 



 





 



 






 




 









 




 













 
 

 

 

 






 





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu/DVD	 Menu / Home
 3	 3	 Exit/Return	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Guide/Top	 Guide / EPG / -/-
 9	 9	 Down	 Down
 Recall	 Back / Return	 Tv/FAV/Radio/Set	 TV/Radio /
 0	 0	 Tv/FAV/Radio/Set	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Red	 Red / Netflix / Search
 Vol+	 Vol+	 Green	 Green / APP / Repeat
 A/D/Content Menu	 Smart / List	 Yellow	 Yellow / YouTube / Repeat
 P+	 CH+ / Page+	 Blue	 Blue / Prime Video / Random
 Vol-	 Vol-	 [<>]	 Picture / Format



















 



 









 

 

 






 
 

 
 


 



 

 

 

 











Original	Replacement	Original	Replacement
 ←[/]→	 Display / Media		
 [i+]/[≡i]	 Info / Angle		
 Text	 Text / Goto		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Eject	 Eject / Surround		
 O)I/II	 Shift + Audio / Lang I/II		
 Stop	 Stop / Hold		
 Play/[≡o]	 Play / Slow		
 II/II>/[▼]	 Pause / Step / Freeze		
 I<</[≡?]	 I<< / Preset-		
 <</[≡+]	 << / Tune-		
 >>/[≡◇]	 >> / Tune+		
 >>I/[O]/[≡X]	 >>I / Preset+		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			Display / Media
			[i+]/[≡i]
			Text
			Audio
			Subtitle
			Eject
			O/I/I
			Stop
			Play/[≡o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow











 







 

















 











 






 






 









Original	Replacement	Original	Replacement
    /> / [∇]	 STEP-FREEZE Pause / Step / Freeze		
  << / [≡?]	 PRESET-  << / Preset-		
 << / [≡+]	 TUNE- << / Tune-		
 >> / [≡♦]	 TUNE+ >> / Tune+		
 >>   [O] / [≡X]	 PRESET+ >>   / Preset+		





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu/DVD	 Menu / Home
 3	 3	 Exit/Return	 Shift + Back / Return
 4	 4	 Exit/Return	 Exit / Cancel / Clear
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Guide/Top	 D.Menu / Top
 Recall	 Back / Return	 Down	 Down
 0	 0	 Tv/FAV/Radio/Set	 TV/Radio /
 Source	 AV / Input / RDS	 Tv/FAV/Radio/Set	 Setup / OPT /
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 A/D / Content	 Smart / List	 Green	 Green / APP / Repeat
 P+	 CH+ / Page+	 Yellow	 Yellow / YouTube / Repeat
 Vol-	 Vol-	 Blue	 Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	[<>]		Picture / Format				
	<[/]>		Display / Media				
	[i+]/[≡i]		Info / Angle				
	Text		Text / Goto				
	Audio		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Eject		Eject / Surround				
	O)/II	+	Shift + Audio / Lang I/II				
	Stop		Stop / Hold				
	Play/[≡o]		Play / Slow				
	II/II>/[▼]		Pause / Step / Freeze				
	I<</[≡?]		I<< / Preset-				
	<</[≡+]		<< / Tune-				
	>>/[≡◇]		>> / Tune+				
	>>I/[O]/[≡X]		>>I / Preset+				

