







 

























 
 
 
 
 
 
 
 

































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Eject/Tv Audio		Eject / Surround
	4		4
	5		5
	6		6
	Recall/Goto	 + 	Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Tv Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVD Menu		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Sound		Sound / Title
	CH-		CH- / Page-
	Vol-		Vol-
	Pic		Picture / Format
	CH+		CH+ / Page+
	Sleep		Sleep / Timer
	Aspect	 + 	Shift + Picture / Format
	DVD Setup		Setup / OPT /
	Back/Tv/Radio	 + 	Shift + Back / Return
	Text		Text / Goto





Original	Replacement	Original	Replacement
EPG	Guide / EPG / -/--	Subtitle	Subtitle / EQ
Play	Play / Slow	Reveal	Shift + Exit / Cancel / Clear
Pause	Pause / Step / Freeze	Hold	Shift + Stop /
Stop	Stop / Hold	List	Smart / List
FAV	Fav / Marker / PC	Index	TV/Radio /
Info	Info / Angle	Subpage	Shift + Smart / List
Red/DVD/USB	Red / Netflix / Search	Size	Zoom / Size
Green/Title	Green / APP / Repeat	Mix	Shift + Display / Media
Yellow/PBC	Yellow / YouTube / Repeat	Freeze	Shift + Pause / Step /
Blue/Angle	Blue / Prime Video / Random		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Return	Back / Return		
Display	Display / Media		
DVD Audio	Audio / Lang I/II		

