

 




 







 


 


 
 




 

 
 
 


 
 

 






 
 




	Original	Replacement		Original	Replacement
	Power		Power		Tv Display
	Mute		Mute		Info
	1		1		Up
	2		2		Down
	3		3		Right
	4		4		Left
	5		5		Enter
	6		6		Ok
	7		7		Vol +
	8		8		Vol -
	9		9		S.M.
	0		0		Smart
	.		Shift + Guide		P.M.
	Recall		Back		Media
	Menu		Menu		Ch +
	Source		AV		Ch -
	Exit		Exit		EPG Page Up
					EPG Page Down
					Sleep
					P.G.
					Aspect
					Sleep
					Format
					3D



