





 














| Original  | Replacement            |
|---|------------------------|
|    | Mute / Dimmer          |
|    | Shift + Pause / Step / |
|    | Audio / Lang I/II      |
|    | Power                  |
|    | Smart / List           |
|    | Sleep / Timer          |
|    | Picture / Format       |
|    | Display / Media        |
|    | 1                      |
|    | 2                      |
|   | 3                      |
|  | 4                      |
|  | 5                      |
|  | 6                      |
|  | 7                      |
|  | 8                      |
|  | 9                      |

| Original  | Replacement      |
|---|------------------|
|    | AV / Input / RDS |
|    | 0                |
|    | Back / Return    |
|    | Setup / OPT /    |
|    | Sound / Title    |
|    | Up               |
|    | CH+ / Page+      |
|    | Vol-             |
|    | Left             |
|    | Menu / Home      |
|   | OK               |
|  | Right            |
|  | Vol+             |
|  | CH- / Page-      |
|  | Down             |
|  | Text / Goto      |
|  | Subtitle / EQ    |





| Original | Replacement       | Original | Replacement                 |
|----------|-------------------|----------|-----------------------------|
|          | [ /= ]            |          | TV/Radio /                  |
|          | <</[...]          |          | << / Tune-                  |
|          | >>/[?]            |          | >> / Tune+                  |
|          | [X]               |          | Fav / Marker / PC           |
|          | Red/↑             |          | Red / Netflix / Search      |
|          | Green/←           |          | Green / APP / Repeat        |
|          | Yellow/→          |          | Yellow / YouTube / Repeat   |
|          | Blue/Enter/H.Lock |          | Blue / Prime Video / Random |
|          | White/↓/CH.List   |          | Guide / EPG / -/--          |
|          | Pause/Timer       |          | Pause / Step / Freeze       |
|          | [♦]/Zoom          |          | Zoom / Size                 |
|          | Exit              |          | Exit / Cancel / Clear       |
|          |                   |          |                             |
|          |                   |          |                             |
|          |                   |          |                             |
|          |                   |          |                             |
|          |                   |          |                             |
|          |                   |          |                             |
|          |                   |          |                             |
|          |                   |          |                             |
|          |                   |          |                             |

