














 





 



 











 



 

 







 

 

 



 














Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 TV	 TV/R	 Mute	 Mute
 Source	 AV	 TTX	 Text
 1	 1	 Audio I/II	 Dual
 2	 2	 P +	 Ch +
 3	 3	 P -	 Ch -
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK / Play/Pause	 Ok
 7	 7	 OK / Play/Pause	 Play
 8	 8	 OK / Play/Pause	 Pause
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Sleep / Zoom	 Sleep	 Display	 Info
 Sleep / Zoom	 Eject	 Menu	 Menu
 Last / Slideshow	 Back	 Red / FAV 1	 Red
 Vol +	 Vol +	 Green / FAV 2	 Green





Original	Replacement	Original	Replacement
 Yellow / FAV 3	 Yellow		
 Green / FAV 4	 Blue		
 Settings	 Options		
 Repeat	 Shift + Text		
 Stop / Wide	 Stop		
 Stop / Wide	 Format		
 I<< / Twin	 I<<		
 << / Swap	 <<		
 << / Swap	 Pre Ch		
 >>	 >>		
 >>I / Hold	 >>I		

