





 





 






















Original	Replacement
 Input	 AV / Input / RDS
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Pro. List	 Smart / List
 0	 0
 Last	 Back / Return
 Info	 Info / Angle
 [≡?]/Reveal	 Play / Slow
 Up	 Up

Original	Replacement
 Menu	 Menu / Home
 [≡i]/Index	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 EPG	 Guide / EPG / -/--
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 I/II	 Audio / Lang I/II
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
 Text	 Text / Goto		
 [ /≡]/Mix	 Rec / Rec Mode		
 [≡B]/Subtitle	 Subtitle / EQ		
 */Freeze	 Pause / Step / Freeze		
 [<>]/Aspect	 Setup / OPT /		
 Sleep	 Sleep / Timer		
 ♥/FAV	 Fav / Marker / PC		

