



Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Screen	 Picture / Format
 Presets	 Setup / OPT /
 ↔	 TV/Radio /
 FAV	 Shift + Fav / Marker / PC
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 Swap	 Fav / Marker / PC
 Photo/Music/Movi	 D.Menu / Top
 World	 Smart / List
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 C	 Exit / Cancel / Clear
 Disp.	 Display / Media
 Search Mode	 Shift + Red / Netflix /
 Return	 Back / Return





	Original	Replacement		Original	Replacement
	CH+	CH+ / Page+		Yellow/Root	Yellow / YouTube / Repeat
	Info	Info / Angle		Blue/Title	Blue / Prime Video / Random
	Vol+	Vol+			
	CH-	CH- / Page-			
	Mute	Mute / Dimmer			
	Vol-	Vol-			
	Rec	Rec / Rec Mode			
	Pause	Pause / Step / Freeze			
	I<<	I<< / Preset-			
	>>I	>>I / Preset+			
	<<	<< / Tune-			
	Play	Play / Slow			
	Stop	Stop / Hold			
	>>	>> / Tune+			
	Red/↑/Zoom	Red / Netflix / Search			
	Red/↑/Zoom	Zoom / Size			
	Green/↓/Repeat	Green / APP / Repeat			

