



























 



 





 

 



 





























Original		Replacement		Original		Replacement	
	Power		Power		Right		Right
	VGA		Red / Netflix / Search		Vol+		Vol+
	AV1		Shift + 1		Vol-		Vol-
	AV2		Shift + 2		Mute		Mute / Dimmer
	AV3		Shift + 3		CH/PR+		CH+ / Page+
	Brightness+		>> / Tune+		CH/PR-		CH- / Page-
	Brightness-		<< / Tune-		1		1
	Contrast+		>>I / Preset+		2		2
	Contrast-		I<< / Preset-		3		3
	Zoom On/Off		Zoom / Size		4		4
	Zoom In		Sleep / Timer		5		5
	Zoom Out		TV/Radio /		6		6
	Menu		Menu / Home		7		7
	OK		OK		8		8
	Up		Up		9		9
	Down		Down		0		0
	Left		Left		AV Mute		AV / Input / RDS





Original

Replacement

Original	Replacement
	[[<>]]
	 Picture / Format

Original

Replacement

Original	Replacement

