

 





 




 
 


 
 

 






 
 

 



 
 
 
 



 

 














 
 

 
 



 

 


 






 







Original	Replacement	Original	Replacement
PWR On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Left	 Left
Epg	 +  Shift + Guide	OK Enter	 Ok
Opt?	 OPT Options	Exit	 EXIT Exit
App	 MEDIA Media	Back	 BACK Back
Info	 INFO Info	Volume+	 Vol +
Subt.List	 SUBT Subt	Volume-	 Vol -
Sleep Timer	 SLEEP Sleep	CH/Page+	 Ch +
TV	 TV/R TV/R	CH/Page-	 Ch -
Video	 D.MENU D. Menu	Audio	 DUAL Dual
Text	 TEXT Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV AV	3def	 3
Menu	 MENU Menu	4ghi	 4
Display	 +  INFO Shift + Info	5jkl	 5
Menu Up	 Up	6mno	 6
Menu Down	 Down	7pqrm	 7



Original	Replacement	
8tuv	 8	
9wxyz	 9	
Guide Pilote	 Guide	
0/10	 0	
FAV Pref.	 Pre Ch	
Red	 Red	
Green	 Green	
Freeze	 Stop	
Yellow	 Yellow	
Blue	 Blue	
On/Off	 +  Shift + Power	
Dec/Pause	 Pause	
22Khz	 List	
Sys/Serv	 +  Shift + Sleep	
Interat	 +  Shift + Smart	
Navi Mode	 +  Shift + List	
Tune-	 +  Shift + Left	

Original	Replacement	
Search	 +  Shift + TV/R	
Aft/Caf	 +  Shift + Ok	
Home Cinema	 Smart	
Tune+	 +  Shift + Right	
	 +  Shift + Exit	
Store	 Rec	
Browse	 +  Shift + Back	
De-emph	 +  Shift + 1	
Swap	 +  Shift + 2	
P.lock	 +  Shift + 3	
Wn	 +  Shift + 4	
50j17	 +  Shift + 5	
Help	 +  Shift + 6	
Copy/Delete	 +  Shift + 7	
Auth./DISEQC	 3D	
Erase	 +  Shift + 8	
Clear	 +  Shift + 9	



Original	Replacement	Original	Replacement
View	 +  Shift + 0		
Alt/16:9	 Format		
East	 >>		
Lang./Rewind	 <<		
H/V Play	 Play		
LNB F.Forward	 >>		

