















 
















 










 









Original		Replacement		Original	Replacement
	Power		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Vol+		Vol+		
	CH+		CH+ / Page+		
	Vol-		Vol-		
	Mute		Mute / Dimmer		
	CH-		CH- / Page-		
	Source		AV / Input / RDS		


















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Original	Replacement	Original	Replacement
	Red		Red / Netflix / Search
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	i		Info / Angle
	CH+		CH+ / Page+
	CH-		CH- / Page-






 





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

Original	Replacement	Original	Replacement
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK/List		OK
	OK/List		Shift + Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Last		Back / Return
	Vol+		Vol+
	Info		Info / Angle































 

 

 

 












 








Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 I>	 Shift + Play /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 ?	 D.Menu / Top
 Audio	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 [+≡]	 Sound / Title
 [≡I≡]	 Smart / List
 OPT+	 Setup / OPT /
 Edit	 Fav / Marker / PC
 Teletext	 Text / Goto
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer

Original	Replacement
 Source	 AV / Input / RDS
 Wide	 Zoom / Size
 V-Format	 Picture / Format





Original		Replacement		Original		Replacement	
	Power		Power		OK/List		Smart / List
	1		1		Right		Right
	2		2		Exit		Exit / Cancel / Clear
	3		3		Down		Down
	4		4		Vol+		Vol+
	5		5		Info		Info / Angle
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		Mute		Mute / Dimmer
	0		0		CH-		CH- / Page-
	Menu		Menu / Home				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Up		Up				
	Guide		Guide / EPG / -/--				
	Left		Left				
	OK/List		OK				

