



| Original       | Replacement               |
|----------------|---------------------------|
| Power          | Power                     |
| USB            | +  Shift + 8              |
| TTX            | Text / Goto               |
| Rec            | Rec / Rec Mode            |
| >>             | << / Tune-                |
| >>>            | >> / Tune+                |
| Fav            | Fav / Marker / PC         |
| I<<            | I<< / Preset-             |
| Play / Pause   | Play / Slow               |
| Play / Pause   | Pause / Step / Freeze     |
| Stop           | Stop / Hold               |
| >>I            | >>I / Preset+             |
| Red / TV/Radio | Red / Netflix / Search    |
| Red / TV/Radio | TV/Radio /                |
| Green / Media  | Green / APP / Repeat      |
| Green / Media  | Display / Media           |
| Yellow         | Yellow / YouTube / Repeat |

| Original     | Replacement                 |
|--------------|-----------------------------|
| Blue / Timer | Blue / Prime Video / Random |
| Blue / Timer | Sleep / Timer               |
| Menu         | Menu / Home                 |
| Up           | Up                          |
| Exit         | Exit / Cancel / Clear       |
| Left         | Left                        |
| OK           | OK                          |
| Right        | Right                       |
| EPG          | Guide / EPG / -/--          |
| Down         | Down                        |
| Back         | Back / Return               |
| Vol+         | Vol+                        |
| Mute         | Mute / Dimmer               |
| CH+          | CH+ / Page+                 |
| Vol-         | Vol-                        |
| Info         | Info / Angle                |
| CH-          | CH- / Page-                 |





|          | Original | Replacement     |                   | Original | Replacement |
|----------|----------|-----------------|-------------------|----------|-------------|
| 1...@    | 1        | TV 1            | 1                 |          |             |
| 2 abc    | 2        | DVD 2           | 2                 |          |             |
| 3 def    | 3        | CD - STB 3      | 3                 |          |             |
| 4 ghi    | 4        | VIDEO 4         | 4                 |          |             |
| 5 jkl    | 5        | TAPE 5          | 5                 |          |             |
| 6 mno    | 6        | TUNER 6         | 6                 |          |             |
| 7 pqrs   | 7        | AUX - HDD 7     | 7                 |          |             |
| 8 tuv    | 8        | USB 8           | 8                 |          |             |
| 9 wxyz   | 9        | BLUETOOTH 9     | 9                 |          |             |
| AUDIO    | Audio    | LANG I/II AUDIO | Audio / Lang I/II |          |             |
| 0        | 0        | HDMI - BAT 0    | 0                 |          |             |
| SUBTITLE | Subtitle | EQ SUBTITLE     | Subtitle / EQ     |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |
|          |          |                 |                   |          |             |

