




Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		OK / List		OK
	3		3		OK / List		Smart / List
	4		4		Right / Vol+		Vol+
	5		5		Right / Vol+		Right
	6		6		FAV		Fav / Marker / PC
	7		7		Down / PR-		CH- / Page-
	8		8		Down / PR-		Down
	9		9		Exit		Exit / Cancel / Clear
	TV / Radio		TV/Radio /		Red / Find		Red / Netflix / Search
	0		0		↑		>>  / Preset+
	←PR		Back / Return		↑		>> / Tune+
	EPG		Guide / EPG / -/--		Green / Zoom		Zoom / Size
	Up / PR+		CH+ / Page+		Green / Zoom		Green / APP / Repeat
	Up / PR+		Up		↓		<< / Tune-





Original	Replacement	Original	Replacement
	↓		I<< / Preset-
	Blue / LR		Blue / Prime Video / Random
	Blue / LR		Audio / Lang I/II
	Yellow / TXT		Text / Goto
	Yellow / TXT		Yellow / YouTube / Repeat
	Pause		Pause / Step / Freeze
	SAT		Shift + 0
	SAT		Display / Media
	TV / AV		AV / Input / RDS
	Sleep		Sleep / Timer
	[::]		Picture / Format
	Info		Info / Angle

