





































Original	Replacement
 Power	 Power
 TV	 TV/Radio /
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Last	 Back / Return
 Info	 Info / Angle
 Sleep	 Sleep / Timer
 Sound	 Sound / Title

Original	Replacement
 Mute	 Mute / Dimmer
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 CH+	 CH+ / Page+
 Down	 Down
 CH-	 CH- / Page-
 Right	 Right
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 Enter	 OK
 Red/PIP On/Off	 Red / Netflix / Search
 Green/Input PIP	 Green / APP / Repeat
 Yellow/Sound PIP	 Yellow / YouTube / Repeat
 Blue/Size PIP	 Blue / Prime Video / Random
 [≡]	 Setup / OPT /





Original		Replacement		Original		Replacement	
	[≡..]		Subtitle / EQ				
	[≡♦]		Zoom / Size				
	[≡?]		Guide / EPG / -/--				
	[≡+]		Stop / Hold				
	[≡o]		Picture / Format				
	[≡ /≡ / ]		Text / Goto				
	[≡◇]		D.Menu / Top				

