




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 World/Internet	 Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Camera/Music/Ph	 Picture / Format
 Guide	 Guide / EPG / -/-
 */o	 Shift + Guide / EPG / -/-
 */o..	 Fav / Marker / PC





Original	Replacement	Original	Replacement
 [≡]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Shift + Text /		
 [-o-]	 Setup / OPT /		
 <<<	 <<< / Tune-		
	 Pause / Step / Freeze		
 >>>	 >>> / Tune+		
 ●	 Rec / Rec Mode		
 ▶	 Play / Slow		
 ■	 Stop / Hold		

