







































































Original	Replacement	Original	Replacement
 Power	 Power	 i	 Info / Angle
 1	 1	 Back	 Back / Return
 2	 2	 ●	 Rec / Rec Mode
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 P+	 CH+ / Page+
 6	 6	 P-	 CH- / Page-
 7	 7	 ↑	 Shift + CH+ /
 8	 8	 ↑	 >>I / Preset+
 9	 9	 ↓	 Shift + CH- /
 0 / □	 0	 ↓	 I<< / Preset-
 0 / □	 Display / Media	 ↑	 Up
 Exit / TV/Radio	 TV/Radio /	 ←	 Left
 Exit / TV/Radio	 Exit / Cancel / Clear	 OK	 OK
 Mute	 Mute / Dimmer	 →	 Right
 Vol-	 Vol-	 ↓	 Down
 Vol+	 Vol+	 Green / Option	 Setup / OPT /





Original

Replacement

	Red		Red / Netflix / Search
	Yellow / Text		Yellow / YouTube / Repeat
	Green / Option		Green / APP / Repeat
	Blue / Recall		Fav / Marker / PC
	Yellow / Text		Text / Goto
	Blue / Recall		Blue / Prime Video / Random

Original

Replacement

