

 

 

 

 

 

 







 

 

 

 





 



 

 



 



 



















 





Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Mode		AV / Input / RDS
	1		1
	2		2
	3		3
	Eject/Nicam2		Eject / Surround
	Eject/Nicam2		Sound / Title
	4		4
	5		5
	6		6
	TXT/MIX		Text / Goto
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	7		7
	8		8
	9		9
	Stop/Exit/Cancel		Exit / Cancel / Clear
	Stop/Exit/Cancel		Stop / Hold
	-/--		Guide / EPG / -/--
	0		0
	Back		Back / Return
	SYS Menu		Menu / Home
	Rec		Rec / Rec Mode
	Up		Up
	CH+		CH+ / Page+
	DTV/Radio		TV/Radio /
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	CH-		CH- / Page-





Original	Replacement
Vol+	Vol+
Return	Shift + Back / Return
Menu DVD	D.Menu / Top
Setup	Setup / OPT /
Display	Display / Media
Search/FAV	Shift + Red / Netflix /
Search/FAV	Fav / Marker / PC
Slow/EPG	Shift + Play /
Slow/EPG	Shift + Guide / EPG / --
Language/Info	Audio / Lang I/II
Language/Info	Info / Angle
Zoom/List	Zoom / Size
Zoom/List	Smart / List
Red/Angle	Red / Netflix / Search
Red/Angle	Shift + Info / Angle
Green/Program	Green / APP / Repeat
Green/Program	Shift + TV/Radio / Program

Original	Replacement
Yellow/Repeat	Shift + Green / APP /
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	Blue / Prime Video / Random
Blue/A-B	Shift + Yellow / YouTube /
<</Hold	Shift + Stop /
<</Hold	<< / Tune-
>>/Index	>> / Tune+
I<</Size	I<< / Preset-
I<</Size	Shift + Zoom /
>>I/Reveal	>>I / Preset+
Subtitle	Subtitle / EQ
Title/Subpage	Shift + Sound / Title
FAV-	Shift + Down
FAV+	Shift + Up

