 






 

 

 

 


 

 

 

 

 



 
 
 







 

 

 





 
 
 

 

 

 
 

 

 
 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 CH+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Prog	 Shift + TV/Radio / Program
 CH-	 CH- / Page-
 Aspect	 Shift + Picture / Format
 S.Mode	 Sound / Title
 P.Mode	 Picture / Format
 Guide/Title	 Guide / EPG / -/-
 Guide/Title	 Shift + Sound / Title
 Menu	 Menu / Home
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Freeze	 Shift + Pause / Step /
 Down	 Down
 Exit	 Exit / Cancel / Clear







Original	Replacement
 i	 ANGLE INFO Info / Angle
 SETUP FAV FAV/Setup	 PC FAV MARKER Fav / Marker / PC
 SETUP FAV FAV/Setup	 OPT-TOOLS SETUP Setup / OPT /
 ANGLE TV.RD Tv/RD/Angle	 SHIFT + ANGLE INFO Shift + Info / Angle
 ANGLE TV.RD Tv/RD/Angle	 PROGRAM TV/RADIO TV/Radio /
 AD AD	 LANG I/I AUDIO Audio / Lang I/I
 MENU TEXT Text/Menu	 GOTO TEXT Text / Goto
 MENU TEXT Text/Menu	 TOP MENU D.MENU D.Menu / Top
 ↑	 SHIFT + ↑ Shift + Up
 S S	 MEDIA DISPLAY Display / Media
 ZOOM Zoom / Rec	 SIZE ZOOM Zoom / Size
 ZOOM Zoom / Rec	 REC MODE Rec / Rec Mode
 ←/Cancel	 SHIFT + ← Shift + Left
 ←/Cancel	 SHIFT + CLEAR EXIT CANCEL Shift + Exit / Cancel / Clear
 MIX OK OK/Mix	 SHIFT + OK Shift + OK
 →/Size	 SHIFT + → Shift + Right
 →/Size	 SHIFT + SIZE ZOOM Shift + Zoom / Size

Original	Replacement
 Stop	 HOLD Stop / Hold
 Eject	 SURROUND Eject / Surround
 ↓	 SHIFT + ↓ Shift + Down
 Play	 SLOW Play / Slow
 STEP II Pause/Step	 STEP-FREEZE II Pause / Step / Freeze
 I<</Hold	 PRESET- I<< / Preset-
 I<</Hold	 SHIFT + HOLD Shift + Stop /
 REVEAL >>I/Reveal	 PRESET+ >>I / Presets+
 SUBPAGE <</Subpage	 TUNE- << / Tune-
 INDEX >>/Index	 TUNE+ >> / Tune+
 GOTO Red/Goto	 SHIFT + GOTO TEXT Shift + Text /
 GOTO Red/Goto	 NETFLIX SEARCH Red / Netflix / Search
 SLOW Green/Slow	 APP REPEAT Green / APP / Repeat
 SLOW Green/Slow	 SHIFT + SLOW Shift + Play /
 REPEAT Yellow/Repeat	 SHIFT + APP REPEAT Shift + Green / APP /
 REPEAT Yellow/Repeat	 REPEAT A-B YouTube REPEAT A-B Yellow / YouTube / Repeat
 A-B Blue/A-B	 SHIFT + REPEAT A-B YouTube REPEAT A-B Shift + Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
 Blue/A-B	 Blue / Prime Video / Random		

