

 


 
 







 
 


















 










 





 




Original	Replacement
	Power
	Sleep
	Cancel
	Repeat
	Play Mode
	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	Disc 3
	Disc 2

Original	Replacement
	Disc 1
	FM Mode/Mute
	L Balance
	Balance R
	Tape Direction
	Tape Display
	SEA Mode
	S.A.Bass
	Surround Mode
	Rec Pause
	Fade Muting
	Vol+
	Vol-
	Up/PTY Search
	Play
	Down/RDS Display Mode
	Stop



 
 







 


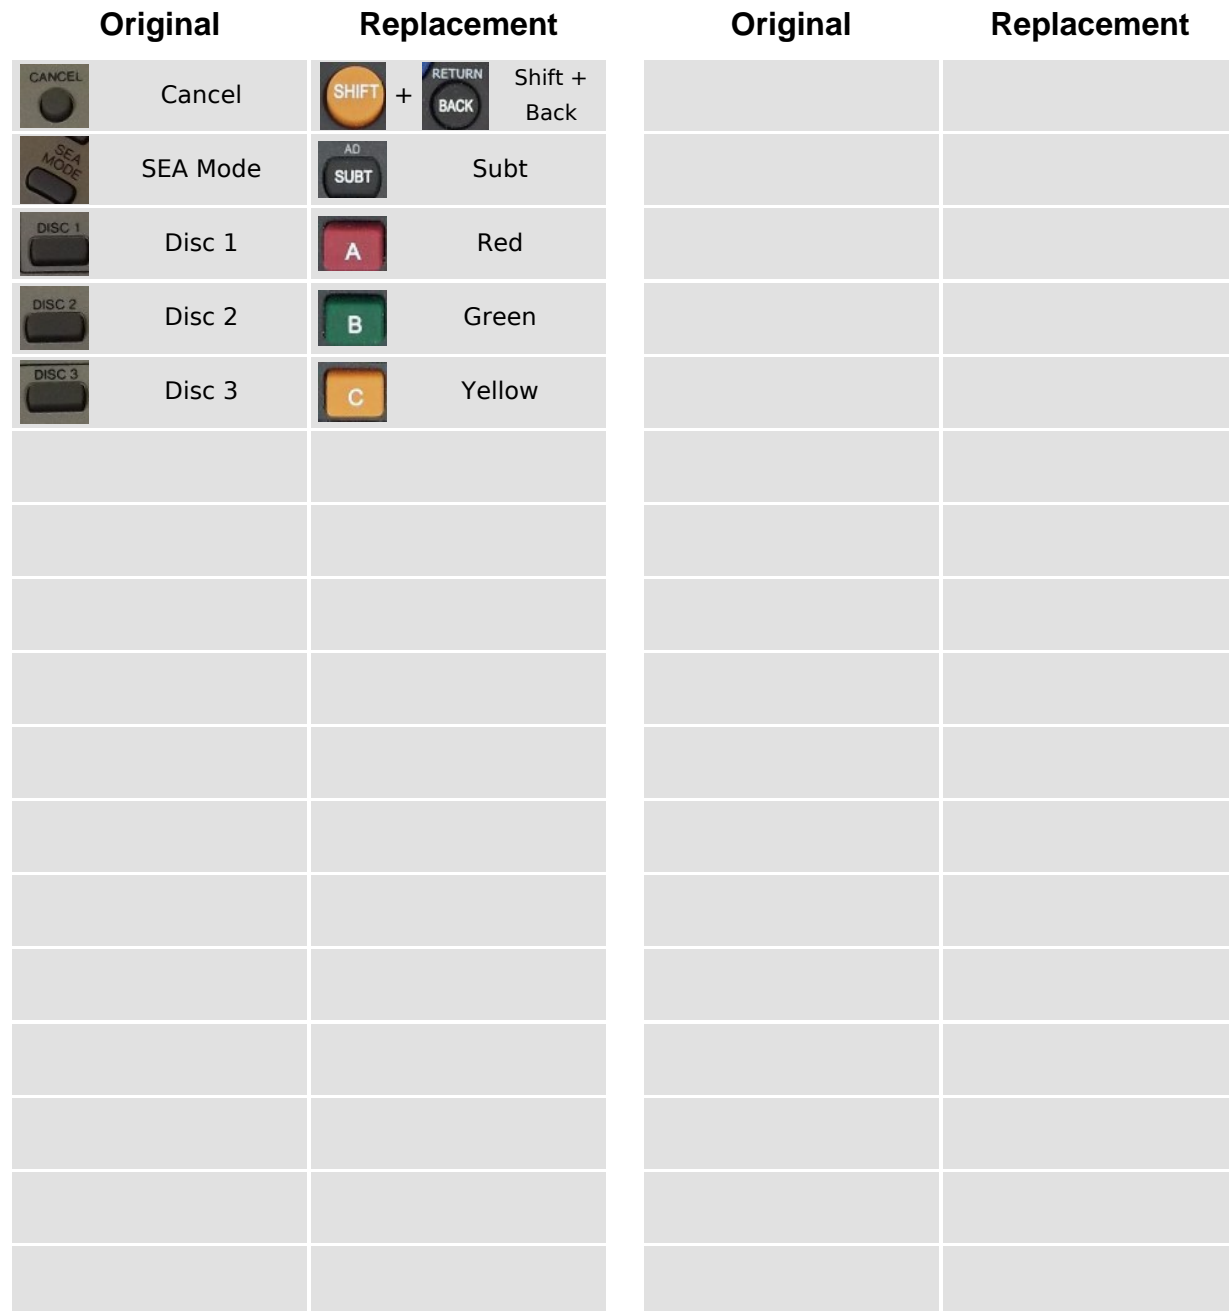


 
 

 

 
 
 
 
 

 





 
 






Original	Replacement
	Power
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	10
	+10
	Play
	Stop
	Fade Muting
	>>I/>>

Original	Replacement
	I<</<<
	Rec Pause
	S.A.Bass
	Surround Mode
	Up/PTY Search
	Down/PTY Display Mode
	Right/PTY Select+
	Left/PTY Select-
	Vol-
	Vol+
	FM Mode/Mute
	Tape Direction
	Tape Display
	L Balance
	Balance R
	Play Mode
	Repeat



 







 



 
 
 

 

 

 
 


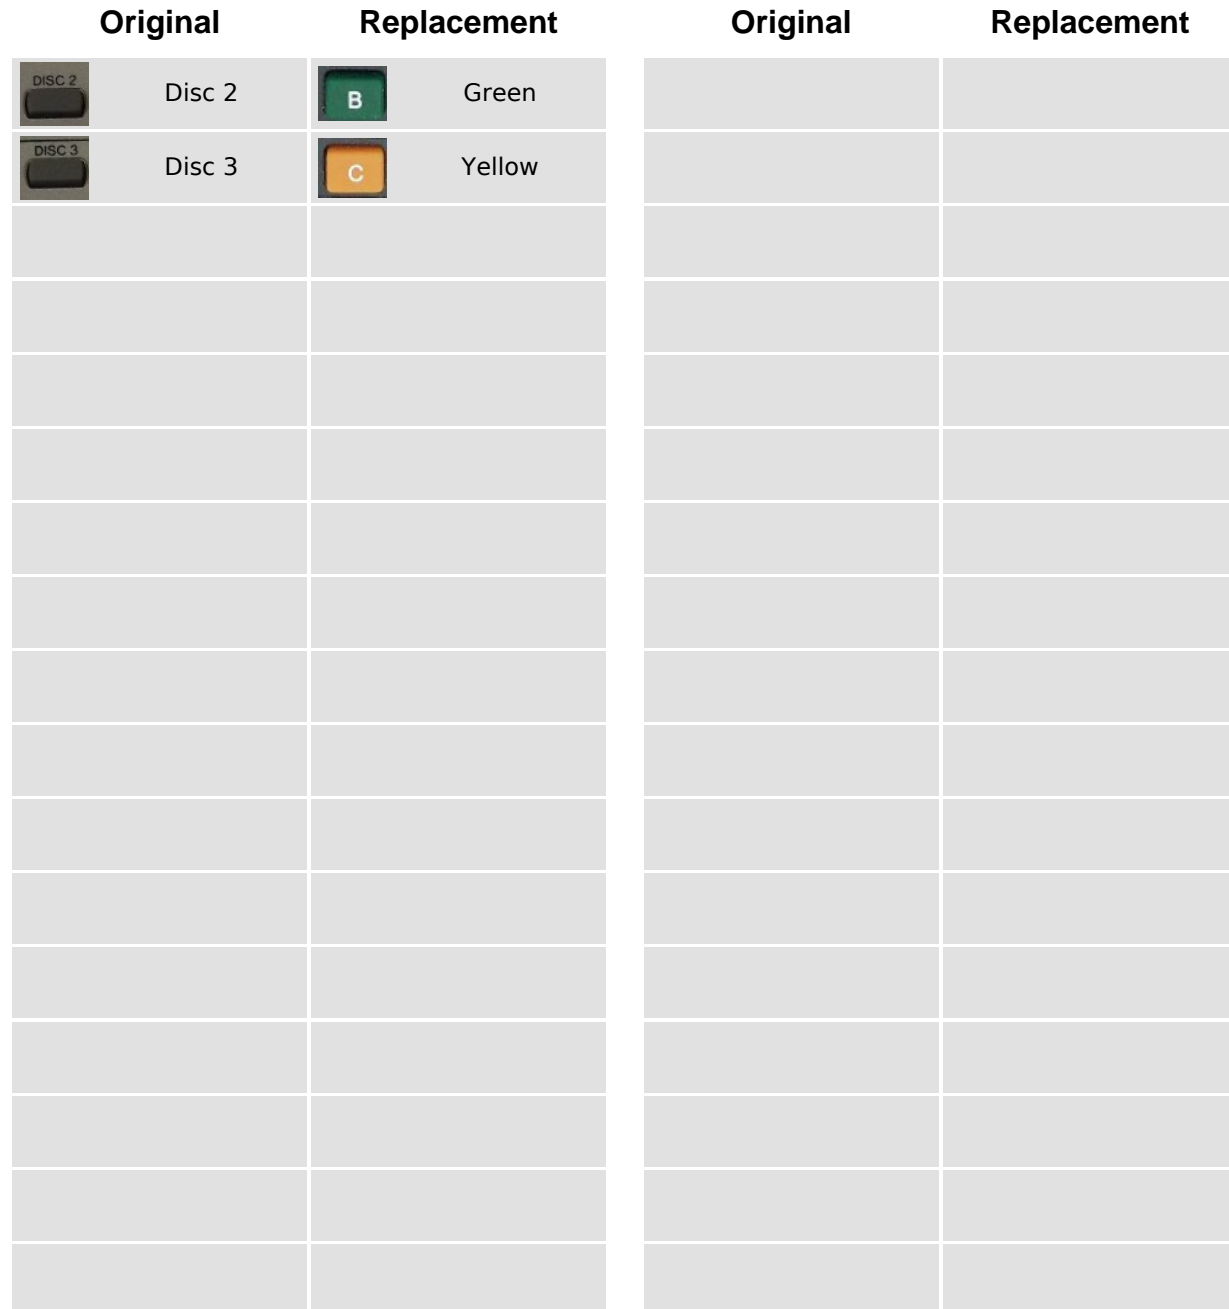 

 
 
 



 






Original	Replacement
	
Power	Power
	
1	1
	
2	2
	
3	3
	
4	4
	
6	6
	
5	5
	
7	7
	
8	8
	
9	9
	
10	0
	
+10	Guide
	
Vol+	Vol +
	
Vol-	Vol -
	
Play	Play
	
Fade Muting	Mute
	
Stop	Stop

Original	Replacement
	
Surround Mode	Dual
	
S.A.Bass	Options
	
SEA Mode	Subt
	
Up/PTY Search	Up
	
Down/RDS Display Mode	Down
	
Right/PTY Select+	Right
	
Left/PTY Select-	Left
	
Sleep	Sleep
	
FM Mode/Mute	Menu
	
Tape Direction	Exit
	
Tape Display	Back
	
L Balance	Text
	
Balance R	AV
	
Play Mode	Format
	
Repeat	Shift + Text
	
Cancel	Shift + Back
	
Disc 1	Red







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 0
 +10	 Guide
 Sleep	 Sleep
 Fade Muting	 Mute
 Play	 Play
 Stop	 Stop
 S.A. Bass	 Options

Original	Replacement
 Surround Mode	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Up/PTY Search	 Up
 Down/RDS Display Mode	 Down
 Right/PTY Select+	 Right
 Left/PTY Select-	 Left
 >>I/>>	 >>I
 I<</<<	 <<
 FM Mode/Mute	 Menu
 Tape Direction	 Exit
 Tape Display	 Back
 L Balance	 Text
 Balance R	 AV
 Play Mode	 Format
 Repeat	 Shift + Text
 Cancel	 Shift + Back



