



















 











 












Original	Replacement
 1	 1
 2	 2
 3	 3
 Standby/On	 Power
 4	 4
 5	 5
 6	 6
 Display	 Display / Media
 7	 7
 8	 8
 9	 9
 Cancel	 Exit / Cancel / Clear
 10	 0
 +10	 Guide / EPG / -/--
 +100	 Fav / Marker / PC
 SET	 Setup / OPT /
 Sleep	 Sleep / Timer

Original	Replacement
 Group Up	 CH+ / Page+
 Clock/Timer	 Shift + Sleep / Timer
 << / Tune-	 << / Tune-
 << / Preset-	 << / Preset-
 Stop / Hold	 Stop / Hold
 Stop/OK	 OK
 >> / Tune+	 >> / Tune+
 >> / Preset+	 >> / Preset+
 Group Down	 CH- / Page-
 Play/Pause iPod	 Pause / Step / Freeze
 Play/Pause CD	 Play / Slow
 Play/Pause USB	 Shift + Play /
 Audio In/FM	 Audio / Lang I/II
 Play Mode	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 FM Mode/Menu	 Menu / Home
 Muting	 Mute / Dimmer





Original	Replacement	Original	Replacement
 Sound Mode	 Sound / Title		
 Super Woofer	 Up		
 Volume+	 Vol+		
 Super Woofer Vol-	 Down		
 Volume-	 Vol-		

