



Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0		0
	AV		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Tv/DTV		Setup / OPT /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	[≡]/Text		Text / Goto
	Down		Down
	Back		Back / Return
	P+		CH+ / Page+
	Vol+		Vol+
	P-		CH- / Page-
	Vol-		Vol-
	[^]/[+]		Smart / List
	<<		<< / Tune-
	Tv/Radio/[?]		TV/Radio /

 
 









Original	Replacement	Original	Replacement
	Play		Play / Slow
	Guide/[♦]		Guide / EPG / -/--
	>>		>> / Tune+
	[^]/Timer		Display / Media
	Rec/Top Menu		D.Menu / Top
	Rec/Top Menu		Rec / Rec Mode
	I-II/[X]		Audio / Lang I/II
	Stop		Stop / Hold
	[...]/[≡i]		Subtitle / EQ
	Pause		Pause / Step / Freeze
	Zoom		Zoom / Size
	(↔)		Sound / Title







 



 

 

 

 




Original	Replacement	Original	Replacement
 Power	 Power		
 Up	 Up		
 Menu	 Menu / Home		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 Down	 Down		
 Back	 Back / Return		
 ↑	 CH+ / Page+		
 ↓	 CH- / Page-		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec/Top Menu	 D.Menu / Top		
 Rec/Top Menu	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		





	Original	Replacement	Original	Replacement
	Power			
	Up			
	Down			
	<<			
	Play			
	>>			
	Rec			
	Stop			
	Pause	