



Original		Replacement		Original		Replacement	
	Standby		Power		Menu		Menu
	USB / Card		Media		Setup		Options
	Open / Close		Eject		Display		Info
	Audio		Dual		Title		Smart
	Subtitle		Subt		Up		Up
	Search		TV/R		Left		Left
	1		1		Enter		Ok
	2		2		Right		Right
	3		3		Down		Down
	4		4		<< REV		<<
	5		5		>> FWD		>>
	6		6		I<< PREV		I<<
	7		7		>>I NEXT		>>I
	8		8		II> Step		Shift + Pause
	9		9		Stop		Stop
	0		0		Play / Pause		Play
	Clear		Exit		Play / Pause		Pause





Original	Replacement	Original	Replacement
 Vol +	 Vol +		
 Vol -	 Vol -		
 Repeat	 Text		
 A-B	 D. Menu		
 Angle	 Format		
 Mute	 Mute		
 L/R	 Ch +		
 N/P	 Ch -		
 PBC	 3D		
 Slow	 Shift + Play		
 V-Mode	 AV		
 Return	 Back		
 HD / Res	 Red		
 Program	 Sleep		
 Zoom	 Shift + Eject		

