


 






Original	Replacement	Original	Replacement
Power	Power	Up Multi Control	Up
1	1	Down Multi	Down
2	2	Right P.Call	Right
3	3	Left P.Call/ </>	Left
4	4	<< Tuning	<<
5	5	>> Tuning	>>
6	6	<	Back
7	7	Play / Pause Band	Play
8	8	A/B +100 Disc	TV/R
9	9	Bass Boost	Media
0	0	Auto / Stop	Stop
+10	Guide	Pause	Pause
PTY	Smart	Phono	Red
Setup	Menu	CD/DVD	Green
Sound	Dual	Tuner	Yellow
Listen Mode	List	MD/Tape	Blue
RDS Disp.	Info	Video1	Eject





	Original	Replacement	Original	Replacement
	Video 2	 AV		
	Mute	 MUTE		
	Vol+	 + VOL		
	Vol-	 - VOL		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Menu	 Menu
 OSD	 Smart
 Return	 Back
 Title	 Info
 Up	 Up

Original	Replacement
 Down	 Down
 Right/>>>I	 Right
 Left/I<<<	 Left
 Enter	 Ok
 <<< Tuning	 <<<
 >>> Tuning	 >>>
 Play/Pause	 Play
 Stop	 Stop
 Pause	 Pause

